

[81025]



Kategorie: Feldgeräte - Sensoren



Flinker Kanaltemperaturfühler

DIGICONTROL F-FKATF121



Anwendung

Der Flinker Kanaltemperaturfühler ist für schnelle Temperaturregelung in Luftkanälen konzipiert. Seine verjüngte Messspitze garantiert günstige t_{90} -(Ansprech-) Zeiten auch bei ungünstigen Wärmeübergängen (z. B. bei Luft mit geringer Strömung).

Abbildung: F-FKATF121

Artikeltyp	Artikelnummer	Messbereich
F-FKATF121/100	FKATF121/100	-35...+150 °C
F-FKATF121/150	FKATF121/150	-35...+150 °C
F-FKATF121/200	FKATF121/200	-35...+150 °C
F-FKATF121/250	FKATF121/250	-35...+150 °C
F-FKATF121/300	FKATF121/300	-35...+150 °C
F-FKATF121/400	FKATF121/400	-35...+150 °C
F-FKATF121/450	FKATF121/450	-35...+150 °C



Technische Daten

Sensor	Pt1000
Toleranz	Klasse A
Güte	Klasse A TGA
Schaltungsart	2-Leiteranschluss
Messstrom	≤1 mA
Ansprechzeit t_{90}	≤ 8 s (strömendes Wasser)
Isolationswiderstand	>100 MΩ bei 20 °C (500 VDC)


Sonstiges

Prozessanschluss	Aluguss-Montageflansch
Schutzrohr	Durchmesser 6 mm auf Durchmesser 4,5 mm Werkstoff 1.4571
Nennlänge	100...450 mm
Gehäuse	Kunststoffgehäuse lichtgrau
Schutzart	IP 65 nach EN 60529


Anschluss

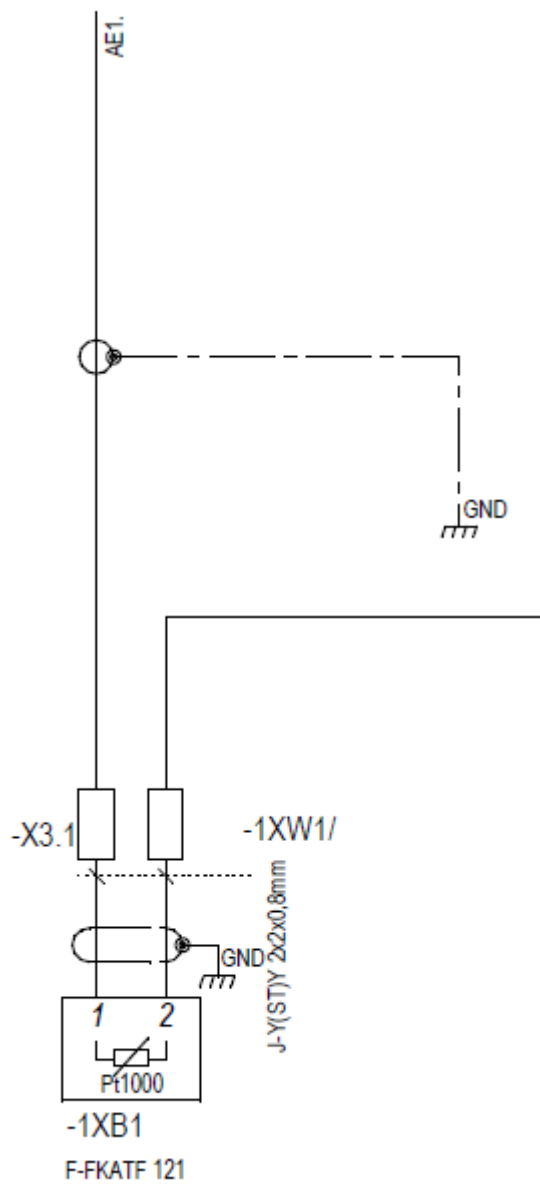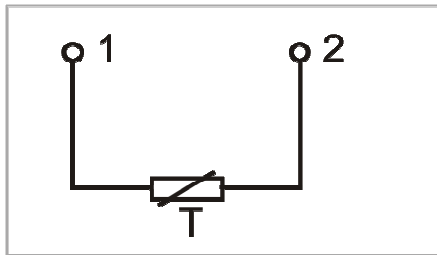

Abmessungen

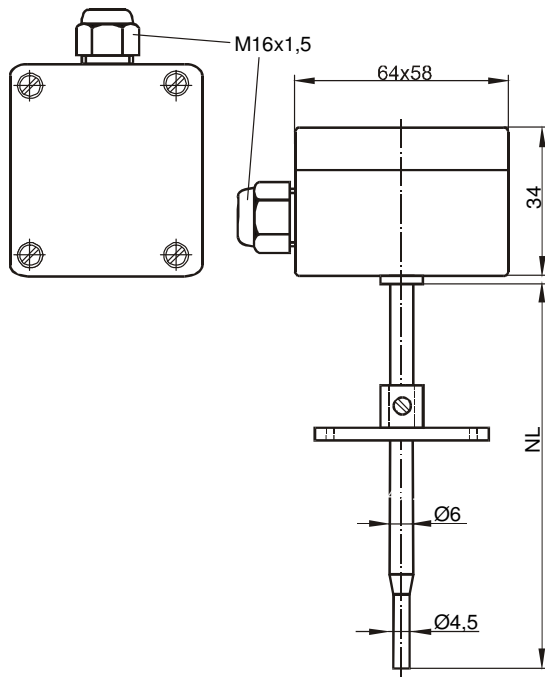

Montage

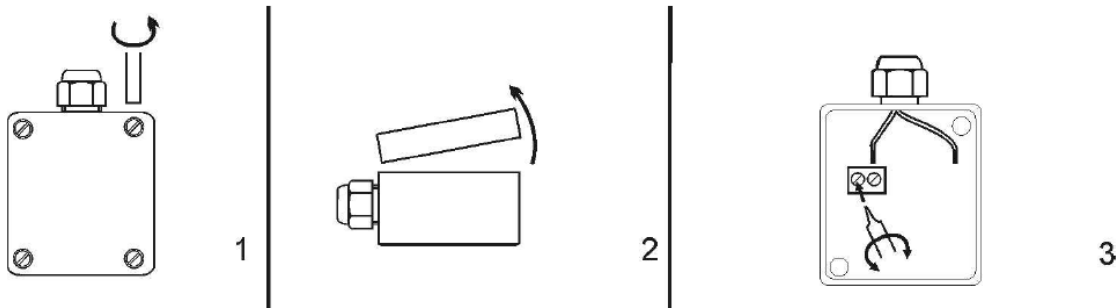

1 bis 3 - Kabelanschluss

Der Einbau hat unter Berücksichtigung der einschlägigen, für den Messort gültigen Vorschriften und Standards zu erfolgen.

Insbesondere ist die Richtlinie VDE/VDI 3512 Teil 3 zu berücksichtigen!

Weitere Hinweise

Infolge der Eigenerwärmung beeinflusst der Messstrom die Messgenauigkeit des Thermometers und sollte daher keinesfalls größer als 1 mA sein. Bei hohen Genauigkeitsanforderungen sollte mit 0,1 mA bestromt werden.



Allgemeine Hinweise

Vor der Installation und Inbetriebnahme ist die Anleitung zu lesen und die alle darin gemachten Hinweise zu beachten. Der Anschluss der Geräte darf nur an Sicherheitskleinspannung erfolgen. Um Schäden und Fehler am Gerät (z. B. durch Spannungsinduktion) zu verhindern, sind abgeschirmte Leitungen zu verwenden, eine Parallelverlegung zu stromführenden Leitungen zu vermeiden und die EMV-Richtlinien zu beachten.

Dieses Gerät ist nur für den angegebenen Verwendungszweck zu nutzen, dabei sind die entsprechenden Sicherheitsvorschriften des VDE, der Länder, ihrer Überwachungsorgane, des TÜV und der örtlichen EVU zu beachten. Der Käufer hat die Einhaltung der Bau und Sicherheitsbestimmung zu gewährleisten und Gefährdungen aller Art zu vermeiden.

Für Mängel und Schäden, die durch unsachgemäße Verwendung dieses Gerätes entstehen, werden keinerlei Gewährleistungen und Haftungen übernommen. Folgeschäden, welche durch Fehler an diesem Gerät entstehen, sind von der Gewährleistung und Haftung ausgeschlossen.

Die Installation der Geräte darf nur durch Fachpersonal erfolgen.

Es gelten ausschließlich die technischen Daten und Anschlussbedingungen der zum Gerät gelieferten Montage- und Bedienungsanleitung. Abweichungen zur Katalogdarstellung sind nicht zusätzlich aufgeführt und im Sinne des technischen Fortschritts und der stetigen Verbesserung unserer Produkte möglich.

Bei Veränderung der Geräte durch den Anwender entfallen alle Gewährleistungsansprüche.

Dieses Gerät darf nicht in der Nähe von Wärmequellen (z. B. Heizkörpern) oder deren Wärmestrom eingesetzt werden, eine direkte Sonneneinstrahlung oder Wärmeeinstrahlung durch ähnliche Quellen (starke Leuchte, Halogenstrahler) ist unbedingt zu vermeiden.

Der Betrieb in Nähe von Geräten, welche nicht den EMV-Richtlinien entsprechen, kann zur Beeinflussung der Funktionsweise führen.

Dieses Gerät darf nicht für Überwachungszwecke, welche ausschließlich dem Schutz von Personen gegen Gefährdung oder Verletzung dienen und nicht als Not-Aus-Schalter an Anlagen und Maschinen oder vergleichbare sicherheitsrelevante Aufgaben verwendet werden.

Die Gehäuse- und Gehäusezubehörmaße können geringe Toleranzen zu den Angaben der Anleitung aufweisen.


Veränderungen dieser Unterlagen sind nicht gestattet.

Reklamationen werden nur vollständig in Originalverpackung angenommen.

GFR - Gesellschaft für Regelungstechnik
und Energieeinsparung mbH

Kapellenweg 42
D-33415 **Verl**
phone: +49 (0) 5246 962-0
www.gfr.de / info.verl@gfr.de

Rudolstädter Str. 41
D-07745 **Jena**
phone: +49 (0) 3641 4697-0
info.jena@gfr.de

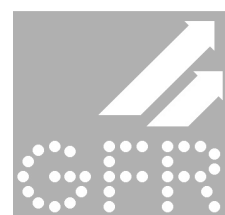

09.2011 / Rev7

[81025]



Category: Field devices - Sensors



Rapid duct temperature sensor

DIGICONTROL F-FKATF121



Application

The rapid duct temperature sensor is designed for quick temperature regulation in air ventilation ducts. Its tapered measurement point guarantees effective t_{90} (response) times, even in disadvantageous heat transitions (for instance, where the airflow is weak).



Figure: F-FKATF121

Item type	Item number	Measuring range
F-FKATF121/100	FKATF121/100	-35 to +150 °C
F-FKATF121/150	FKATF121/150	-35 to +150 °C
F-FKATF121/200	FKATF121/200	-35 to +150 °C
F-FKATF121/250	FKATF121/250	-35 to +150 °C
F-FKATF121/300	FKATF121/300	-35 to +150 °C
F-FKATF121/400	FKATF121/400	-35 to +150 °C
F-FKATF121/450	FKATF121/450	-35 to +150 °C


Specifications

Sensor	Pt1000
Tolerance	Class A
Rating	Class A TGA
Connection method	Double lead connection
Measuring current	≤1 mA
Reaction time T90	≤ 8 s (flowing water)
Insulating resistance	>100 MΩ bei 20 °C (500 VDC)
Miscellaneous	
Process connection	Cast aluminium mounting flange
Thermowell	Diameter 6 mm at diameter 4.5 mm material 1.4571
Nominal length	100 to 450 mm
Housing	Plastic housing, light grey
Degree of protection	IP 65 according to EN 60529


Connection

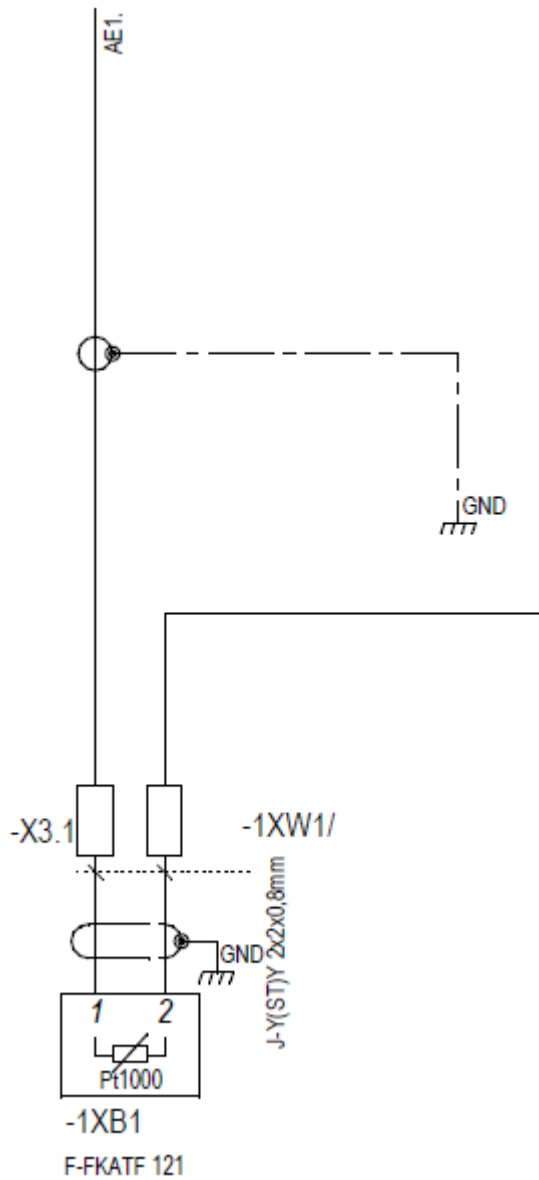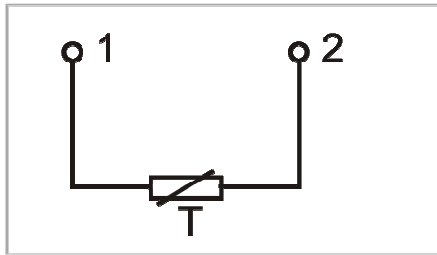

Dimensions

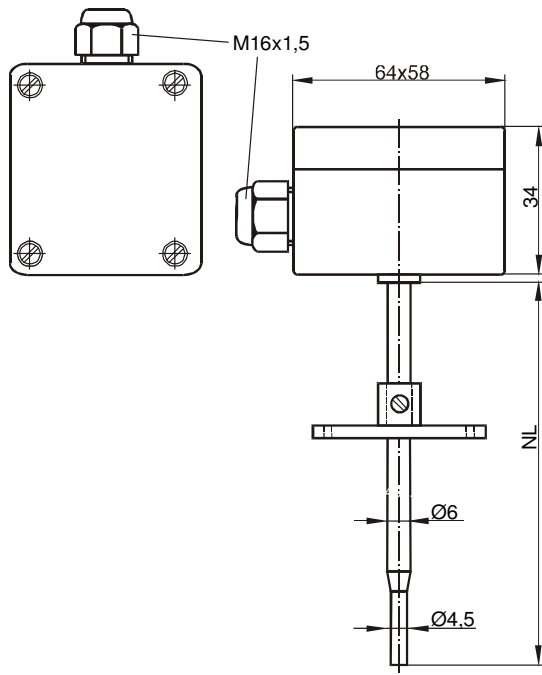

Assembly

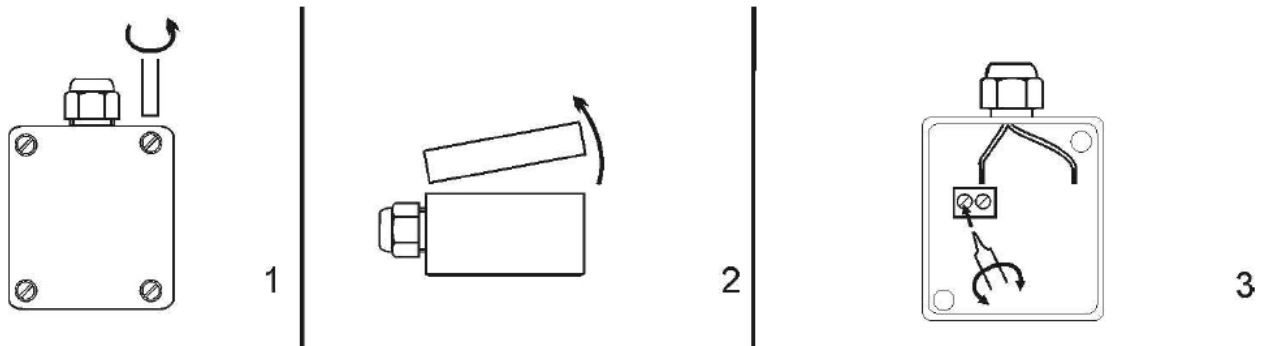

1 to 3 - cable connection

Always observe any regulations and standards valid at measuring location when installing this device. Guideline VDE/VDI 3512 Part 3 should be noted in particular.

Further information

Own heat from measuring current can affect accuracy of thermometer and should for this reason never exceed 1 mA. In case a high level of precision is required, it has to be supplied with 0.1 mA.



General Information

Read the manual and all of the instructions before installing and commissioning the device.

Use only safety extra-low voltage to connect the devices. To prevent damage to the device and to avoid causing defects (due to voltage induction, for example), use shielded cables, avoid laying wires parallel to current-carrying lines, and comply with EMC guidelines.

This device must be used for its specified purpose only. It should always be used in accordance with the safety regulations of the VDE, the countries and their monitoring bodies, the TÜV (German Technical Inspection Agency), and the local energy supply company. The purchaser must comply with all installation and safety instructions and avoid all forms of danger.

We will accept no responsibility for damage and defects caused by improper use of the device. Secondary damage caused by defects on this device are not covered by the warranty.

Only qualified technicians may install the devices.

Only the installation and operating instructions that were included with the device are applicable. Deviations from the catalogue images are not listed separately. Such deviations may occur due to technical advancements and constant improvements to our products.

All warranty claims become void if the user modifies the device.

This device may not be used near sources of heat (e.g. radiators) or the heat flow they create. Keep away from direct sunlight, heat radiation, or similar sources (intense light, halogen lamps).

Using the device near devices that are not compliant with EMC guidelines may have an effect on its operation.

This device may not be used for monitoring purposes intended to protect persons from risk and injury. It may also not be used as an emergency OFF switch on systems and machines, or for other tasks that are relevant to safety.

The housing and housing accessory dimensions may show slight deviations from the specifications in the instructions.


These documents may not be changed in any way.

Complaints will only be handled if the device is returned in its original packaging.

GFR - Gesellschaft für Regelungstechnik
und Energieeinsparung mbH

Kapellenweg 42
D-33415 **Verl**
Phone: +49 (0) 5246 962-0
www.gfr.de / info.verl@gfr.de

Rudolstädter Str. 41
D-07745 **Jena**
Phone: +49 (0) 3641 4697-0
info.jena@gfr.de

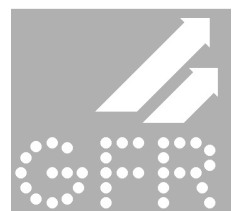

09/2011 / Rev7